

SENCOR

EN ■ User Manual

CZ ■ Uživatelská příručka

SK ■ Používateľská príručka

HU ■ Felhasználói kézikönyv

PL ■ Podręcznik użytkownika

Speed Limiter

Omezovač rychlosti

Obmedzovač rýchlosti

Sebesség-korlátozó

Ogranicznik prędkości

The scooter is factory equipped with a speed limiter that limits its maximum speed to 25 km/h to meet the conditions for its operation on roads. Only electric scooters with a power of up to 1,000 W and a maximum speed of up to 25 km/h can be used on roads. Detailed information regarding this issue can be found in Annex 8 of Decree No. 153/2023 Coll., on the approval of technical fitness and technical conditions of operation of vehicles. The scooter complies with the conditions set out in the decree only when the speed limiter is switched on. The speed limiter can be deactivated exclusively for the use of the scooter off-road, in places such as closed circuits or private land. In the event that the speed limiter is switched off, the scooter is deemed to be a motor vehicle unfit for use on the road with all the consequences thereof and its operator is responsible for ensuring that it is used exclusively off the road and that the speed limiter is switched back on before it is used on the road. Please note that it is not possible to register an electric scooter as a motor vehicle.

Unblocking / Blocking the Speed Limiter

1. How to Unblock the Speed Limit above 25 km/h

Starting the Operating Mode

- 1) Switch on the electric scooter.
- 2) Fully press and hold down the speed control until the display shows a value of 16.
- 3) Keep holding down the speed control and press the brake lever simultaneously.
- 4) Release the brake lever.

How to Unblock TURBO Driving Mode

- 1) Set the speed control to the highest position while holding the brake lever.
- 2) Press the on/off button 8 times quickly.
- 3) Successful unblocking will be announced by an audible tone.
- 4) Release the speed control and brake lever.

2. Blocking the Speed Limit up to 25 km/h

How to Block TURBO Driving Mode

- 1) Put the electric scooter into operating mode.
- 2) Set the speed control to the highest position while holding the brake lever.
- 3) Press the multi-function button 8 times quickly.
- 4) Successful unblocking will be announced by an audible tone.
- 5) Release the speed control and brake lever.



CAUTION:

Always make changes to the controller settings when the SCOOTER X50 is not in motion.

